



ASSEMBLY INSTRUCTIONS

Ax1



Bx1

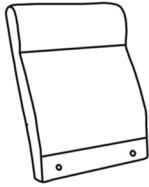


Cx1



Dx1



Ex1



Right

Fx1



Left

Gx10



M8*60mm

Hx2



Ix4



Jx1





M8



Kx8




1

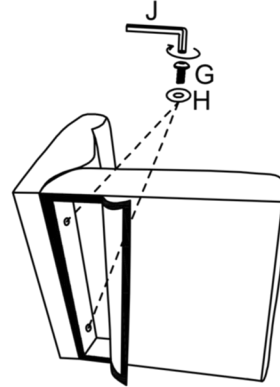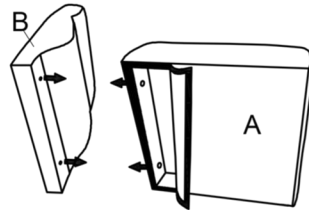




2

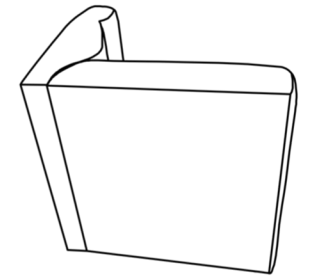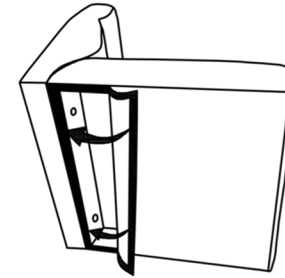

3


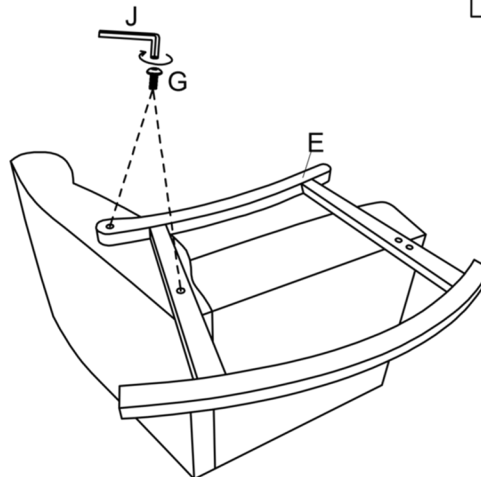


4

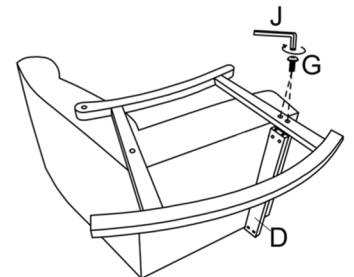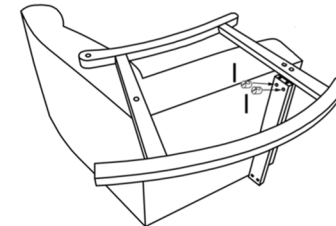


ASSEMBLY INSTRUCTIONS

5

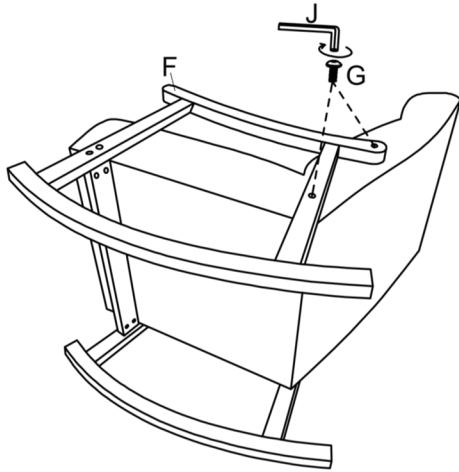



6

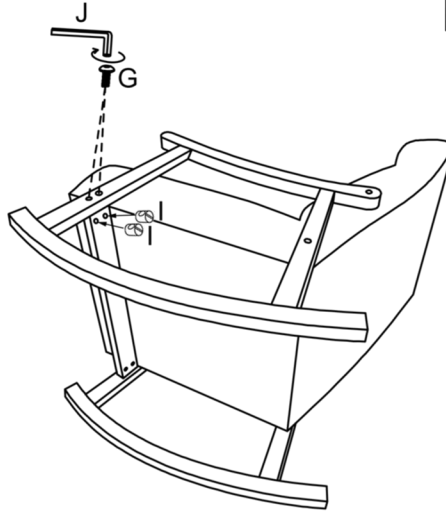


7

Fasten the screws to 100%

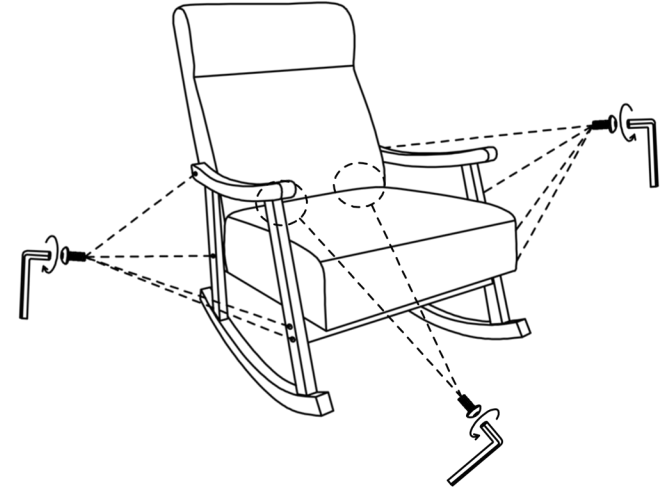

8

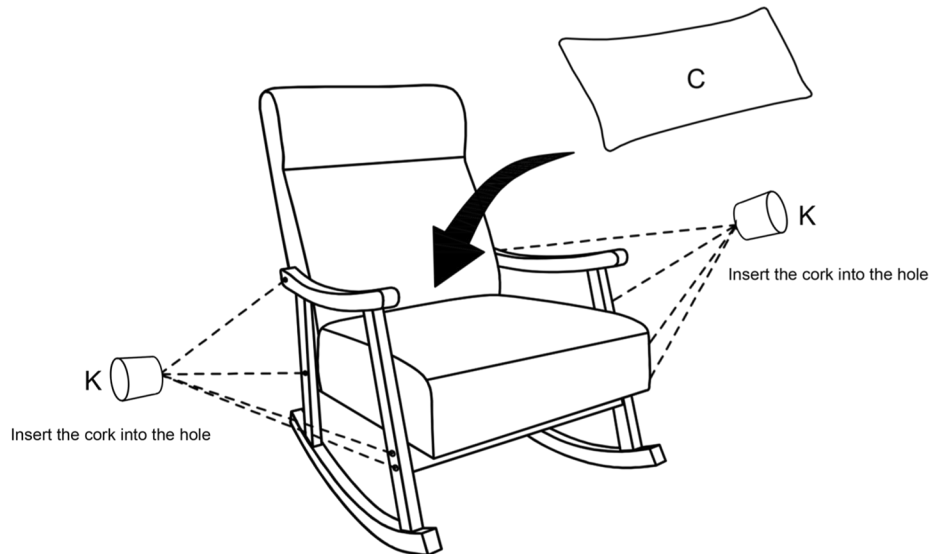

9

