



ASSEMBLY INSTRUCTIONS

Ax1




Bx1

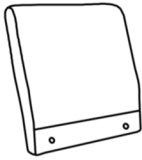

Cx2




Dx1



Right

Ex1



Left

Fx1



M8

Gx10



M8*60mm

Hx2




Ix4





Jx6





Kx4




1

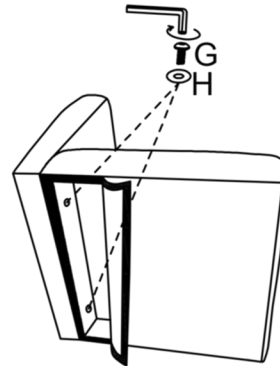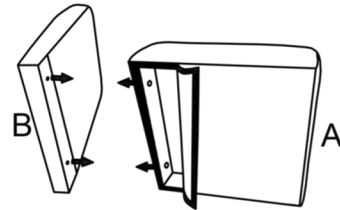

2

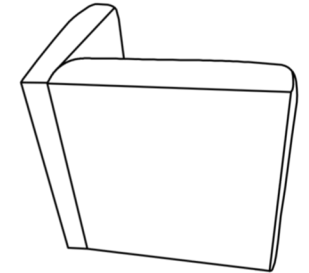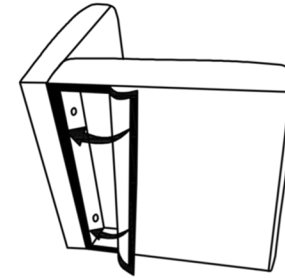


3

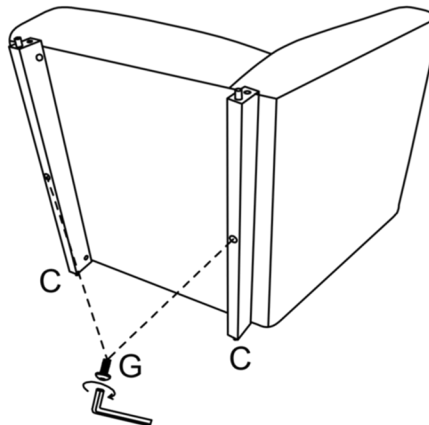

Fasten the screws to 50%



4

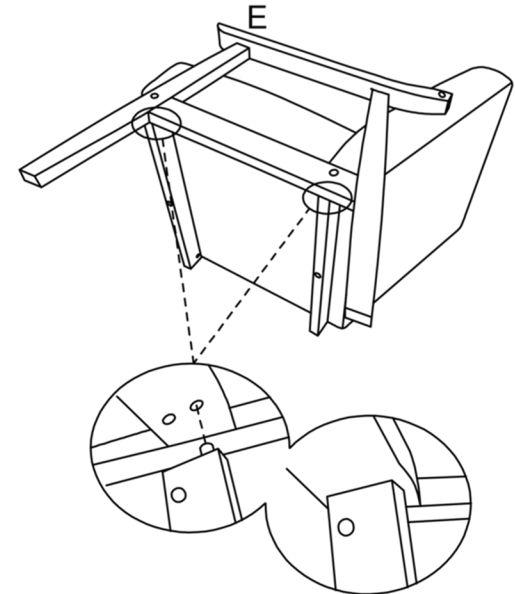


ASSEMBLY INSTRUCTIONS

5

Fasten the screws to 50%

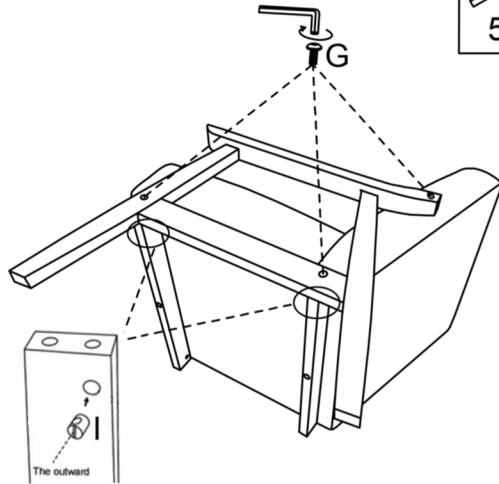



6

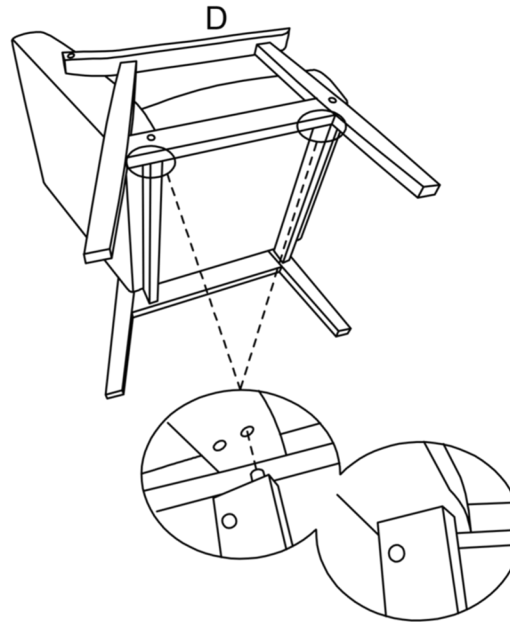



7

Fasten the screws to 50%

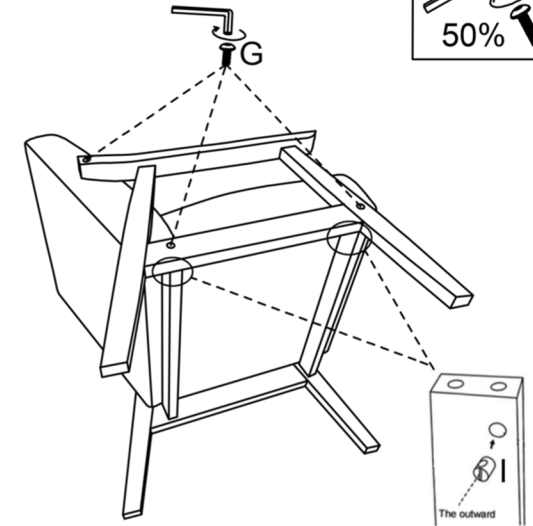


8

Fasten the screws to 100%

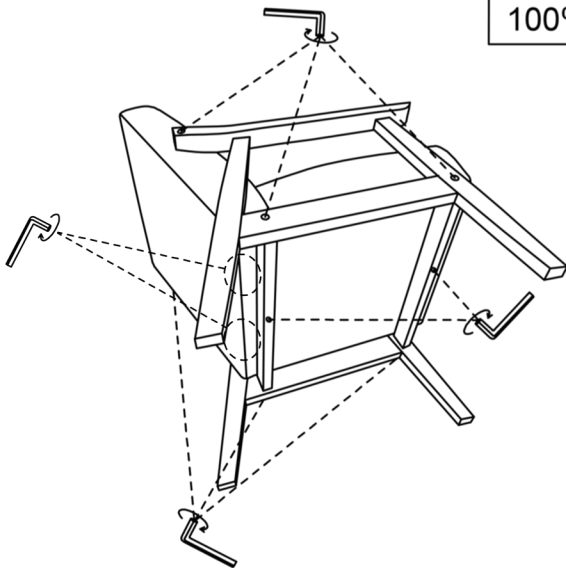

9

Insert the cork into the hole

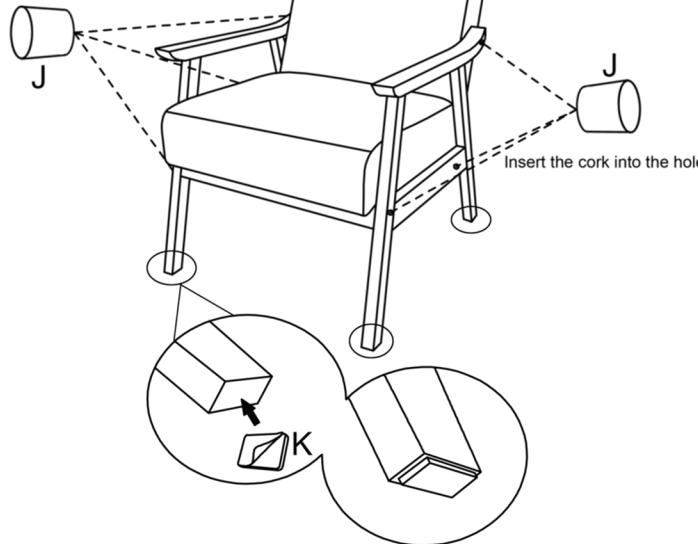

10

