


ASSEMBLY INSTRUCTIONS


Ax1




Bx1

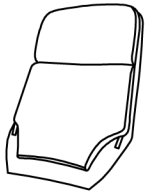

Cx1Rx1L

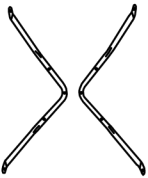

Dx1Rx1L

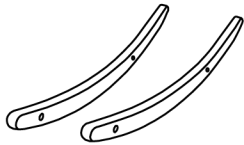

Ex2



M8*35mm

Fx2



Gx6



M6*30mm

Hx4




M6*20mm

Ix4



Jx1

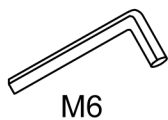


M6

Kx1




M4

1

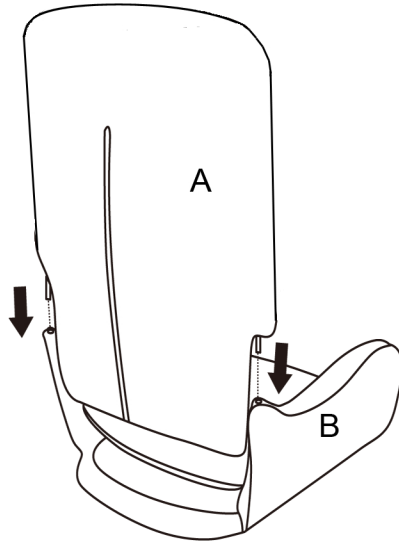


2

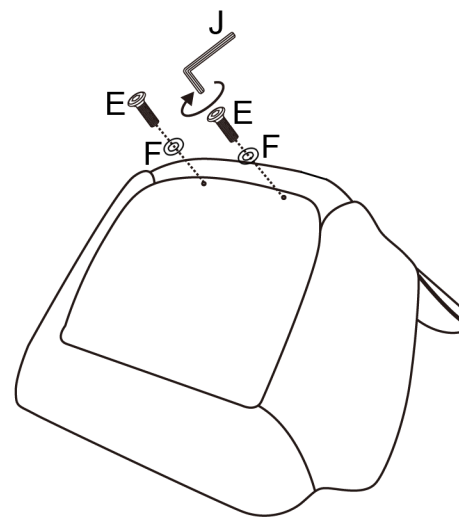


3

Fasten the screws to 50%

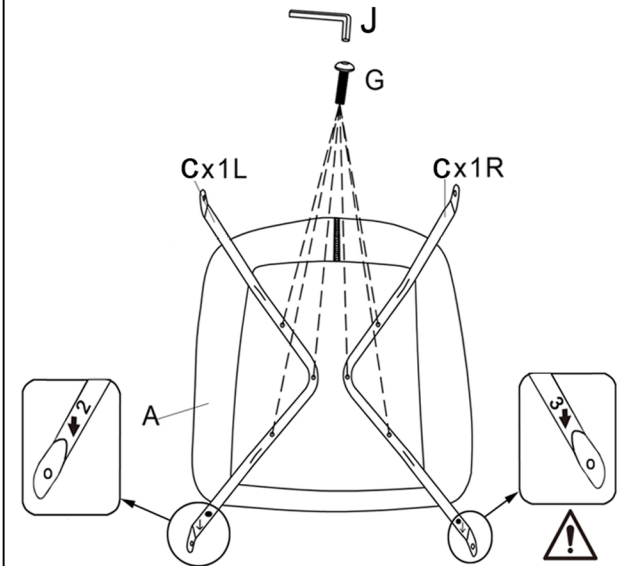

4

The Wooden feet
on the outside

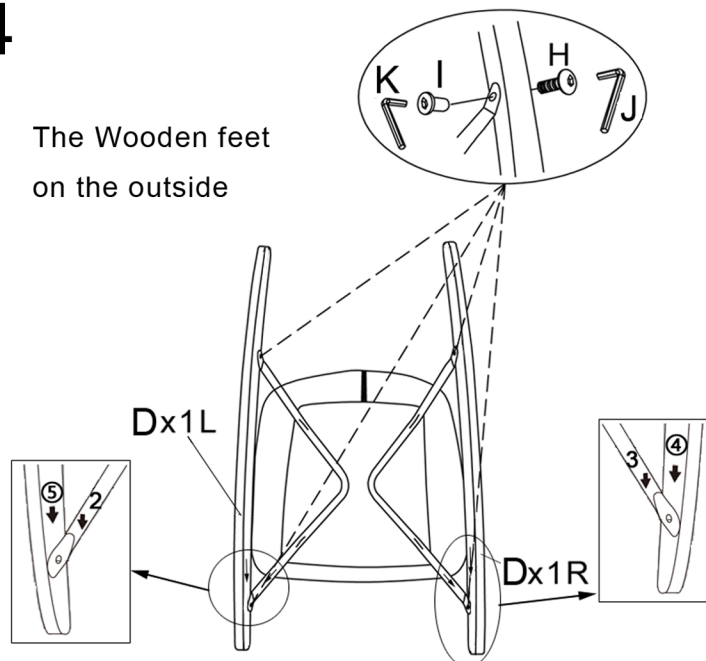

5



Tips: Don't 100% tighten the screws
before all screws are in right position